

**ROMTEC**  
www.romtec.com


Romtec, Inc.  
18240 North Bank Rd.  
Roseburg, OR 97470  
541-496-3541 • Fax: 541-496-0803  
info@romtec.com

**PRODUCT INSTALLATION**

**Cross-Linked Polyethylene Toilet Riser**

**INSTALLATION PROCEDURE - in Romtec Cross-Linked Polyethylene Vault**

The Romtec Toilet Riser is installed through the fitting in the top of the Romtec cross-linked polyethylene vault. 1) Install the toilet seat/lid before installing the riser. 2) Clean any concrete or dirt from the top of the black vault flange. 3) Slip the toilet riser into the top of the vault until the riser flange fits snugly against the vault flange surface. 4) Use four stainless steel screws to fasten the riser to the vault. No sealant is required.

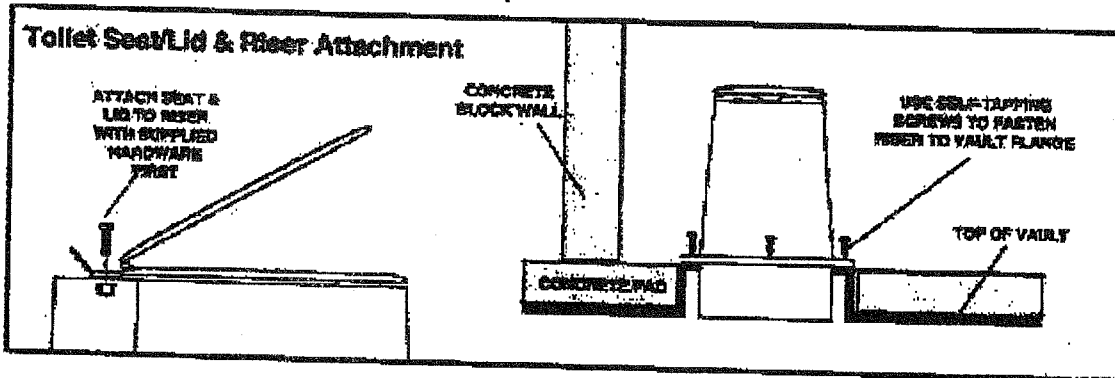

**INSTALLATION PROCEDURE - in Concrete Vault**

The Romtec Toilet Riser is installed through an opening in the top of the concrete vault. 1) Install the toilet seat/lid before installing the riser. 2) Clean any concrete or dirt from the top of the slab. 3) Apply a bead of silicone sealant to the bottom surface of the flange on the near the base of the riser. 4) Slip the toilet riser into the top of the vault until the riser flange fits snugly against the concrete slab surface. 5) Press down firmly on the riser to seat the sealant into the concrete.

**CONCRETE VAULT OPENING DIMENSIONS**

The dimensions of the opening in the top of the concrete vault are shown in the drawing on the right.

